

论坛 发动机资料数据及常见故障排除 后传动的装配

搜索本版 [搜索](#)

[发帖](#) [回复](#)

[返回列表](#) [1](#) [2](#) [3](#) [下一页](#)

查看: 1225 | 回复: 26

独自飘流



管理员
😊😊😊

后传动的装配 [复制链接] [Rear drive assembly.](#)

 发表于 2011-7-4 12:39 | 只看该作者 | 倒序浏览 | 打印

[楼主](#)

首先将28个滚针装入主动齿里面的齿轮壳里。
滚针型号2.5*14
为防止脱落遗失。可先在齿轮壳里面抹上润滑油脂。
可粘住滚针









[DSCN1809.JPG](#) (152.03 KB, 下载次数: 0)



[DSCN1810.JPG](#) (148.53 KB, 下载次数: 0)



DSCN1814.JPG (155.78 KB, 下载次数: 0)



本主题由 独自飘流 于 2011-8-4 16:24 置顶

收藏 2 分享 0 支持 0 反对 0

天下揹友一家人。用诚挚的心结交每一个朋友
电话13759750268。QQ53005176
有事您说，，没事聊

回复 引用

举报 返回顶部

独自飘流

发表于 2011-7-4 12:47 | 只看该作者

沙发



管理员



The pinion gear assembly is pressed in place, making sure the needle bearings don't fall out of place.

然后将主动齿轮一并压入壳体内，此时一定要注意主动齿轮小端得滚针不能脱落





然后装上花型垫片保证双排轴承回油道畅通。仔细看下
图排列部件。拧上轴承螺母。。《轴承螺母为反方向丝扣》
Install the double-row ball bearing so that the oil return groove is not obstructed.
The bearing nut has a left-hand thread.





最后装入油封

Next, install the oil seal.



天下揆友一家人。用诚挚的心结交每一个朋友
电话13759750268。QQ53005176
有事您说，，没事聊

 点评  回复  引用

[举报](#) [返回顶部](#)

独自飘流

 发表于 2011-7-4 12:59 | 只看该作者

板凳



安装被动齿轮 Installing the ring gear.

先将207轴承《与曲轴轴承相同》压入外壳。。装配时
尽可能的在轴承内部打点机油保证轴承的灵活性。

Press the 6207 bearing (same as the crankshaft bearing) into the shell.



下入被动齿轮组件时候 记住把中间一个支撑套放进去，，千万别忘掉 看图









天下挚友一家人。用诚挚的心结交每一个朋友
电话13759750268。QQ53005176
有事您说，，没事聊

 点评  回复  引用

[举报](#) [返回顶部](#)

独自飘流

 发表于 2011-7-4 13:07 | 只看该作者

地板



管理员



安装被动齿轮壳的滚针 Apply grease to hold the 45 ring gear needle
滚针数量45根。滚针型号 3*16 bearings in place (3 Ø x 16 mm).
先在轴承槽内抹上润滑脂





一根根沾上滚针





天下挚友一家人。用诚挚的心结交每一个朋友
电话13759750268。QQ53005176
有事您说，，没事聊

🗨️ 点评 🟡 回复 💬 引用

[举报](#) [返回顶部](#)

独自飘流

👤 发表于 2011-7-4 13:16 | 只看该作者

5#



管理员
👍👍👍

准备将组合好的壳盖 扣合 Apply sealant to the cover gasket.
先装入纸垫，尽量涂点密封胶







这点必须要注意的是。将上下壳盖扣合后。在没下到底的情况下。必须先带上后牙包后部这两个螺丝。不然等完全扣合，螺母装不进去





锁紧螺丝



天下抔友一家人。用诚挚的心结交每一个朋友
电话13759750268。QQ53005176
有事您说，，没事聊

[点评](#) [回复](#) [引用](#)

[举报](#) [返回顶部](#)

独自飘流

[发表于 2011-7-4 13:28](#) | [只看该作者](#)

6[#]

安装草帽油封 Installing the oil seal.




管理员



将油封套在齿轮壳的端轴上，千万注意油封上的回油孔对准壳体上的回油孔，安装时并注意防止油封弹簧脱落

Position the seal so that the oil return channel is not obstructed.

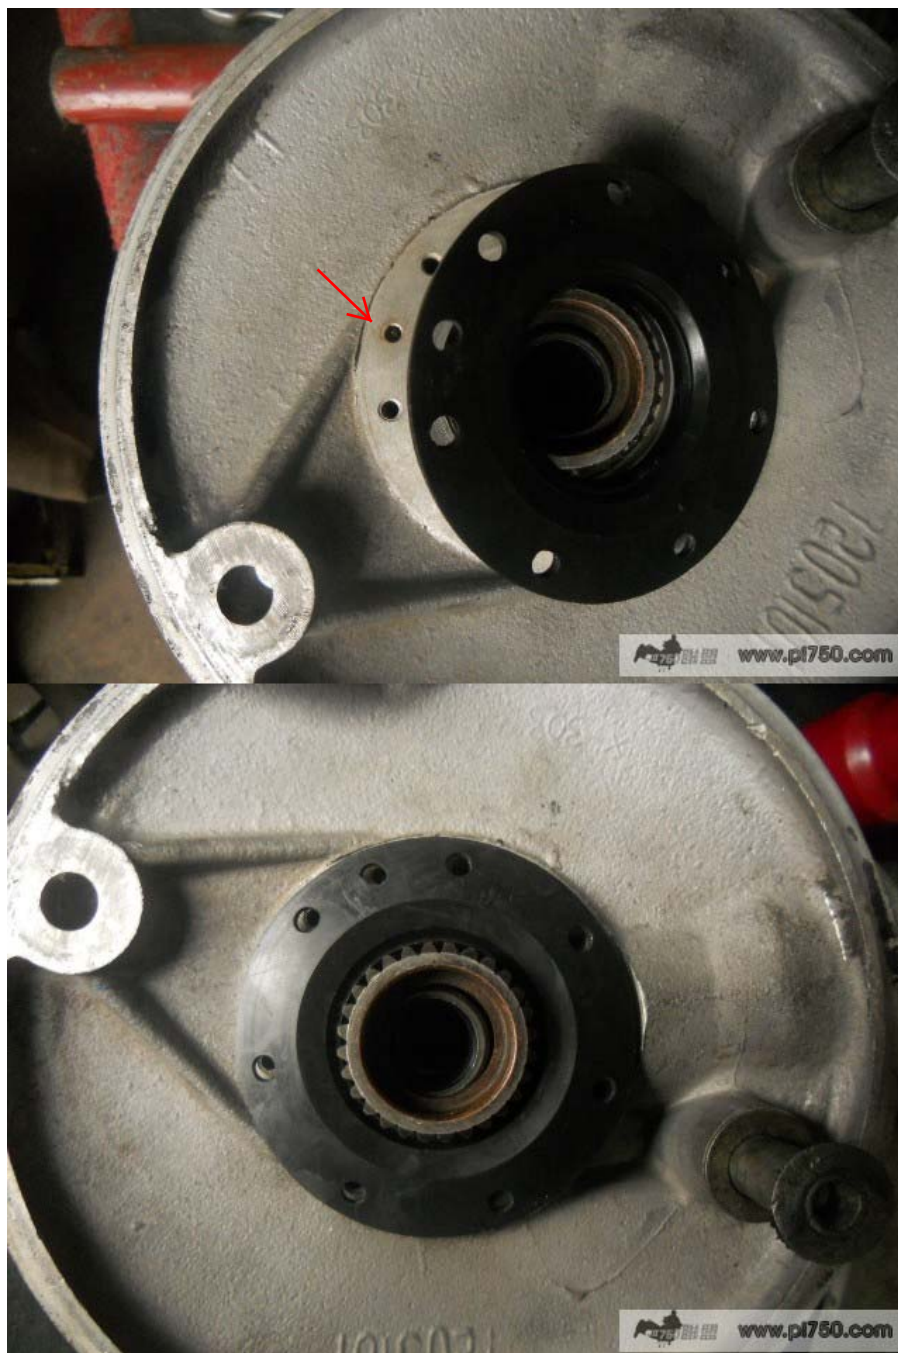

安装油封盖板

盖板上的回油孔亦应对正，用7颗螺丝固定

Install the oil seal cover with the 7 bolts.



天下揆友一家人。用诚挚的心结交每一个朋友
电话13759750268。QQ53005176
有事您说，，没事聊

[点评](#) [回复](#) [引用](#)

[举报](#) [返回顶部](#)

独自飘流

[发表于 2011-7-4 13:29](#) | [只看该作者](#)

7#

安装传动轴

接下来安装传动轴。。首先仔细看下面几张图片。
传动轴的销孔装的时候是分方向的

Next, install the drive shaft.

Pay attention to the photos for the correct placement of the splined shaft and its retaining bolt.








按照上图所示方向装入传动轴。。并确认到底。。

Assemble as shown above.



接下来砸进去销丝。这个也分方向。销丝上有个小的平面应该对准传动轴方向

Hammer the retaining pin in place. The tapered edge should face towards the driveshaft.

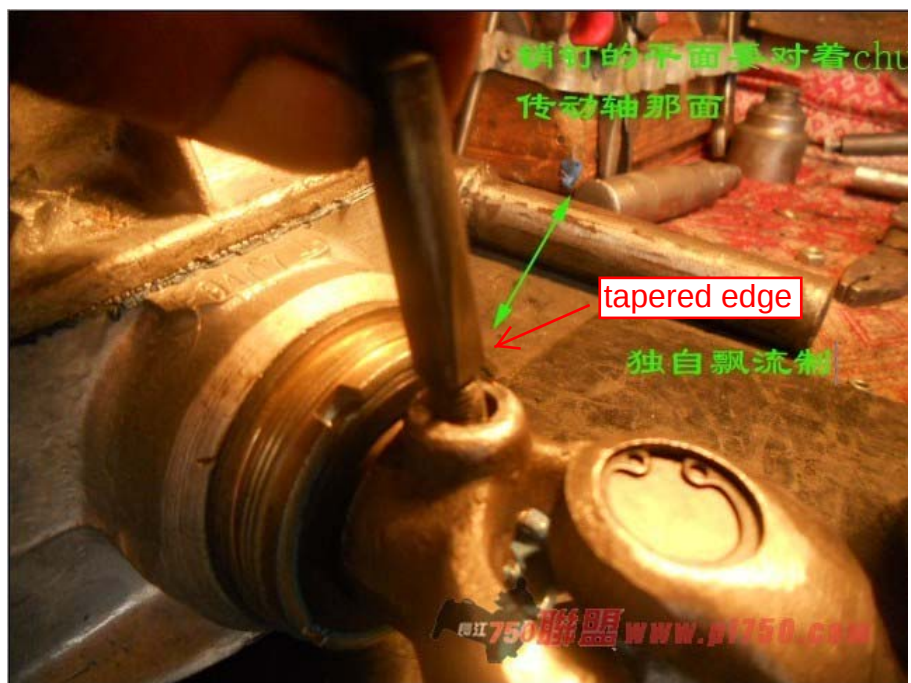



记得用开口销锁死 Lock the castellated nut with a cotter pin.



最后拧上传动轴防尘套、《反丝》完成

Lastly, install the universal joint "bell cover" to complete the assembly.



[111.jpg](#) (86.16 KB, 下载次数: 3)